


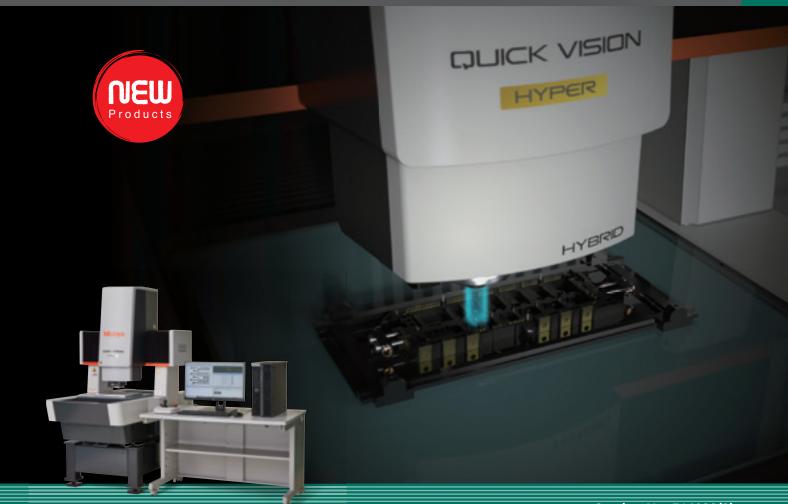

CNC Vision Measuring System QUICK VISION Pro Series QUICK VISION Series



Catalog No. E14028(3)



Highly Advanced Non-contact Measurement Technologies

Well-designed main unit structured for high-accuracy measurement and auto focus.

Integration of these high-performance technologies has made 3D non-contact measurement a reality.

The QUICK VISION Pro, our CNC vision measuring machine family, never stops evolving.

Enables high-throughput measurements required for vision measuring systems

In recent years, the technology surrounding our lives has entered a period of substantial change. Daily updates and technological innovations in motorized vehicles, 5G communications, and IoT technologies are evolving with unprecedented speed.

The QUICK VISION Pro was developed to keep pace with these technological innovations and industrial challenges

Experience the high-throughput non-contact measurement that Mitutoyo offers.



See video from her

MEDICAL

—— Three unique Mitutoyo features supporting high reliability 《Medical》


Ultra-small

Medical devices requiring high accuracy

Medical devices directly affect people's health and life. Therefore, every part requires strict adherence to demanding accuracy specifications. The lens and forceps of an endoscope, for example, are installed in a tip with a minimum diameter of 3 mm. With a maximum of 4,300x magnification, various types of auto focus, and high resolution edge detection,

the QUICK VISION Pro allows you to measure objects without making contact for applications that require accuracy at the most minute level. Its improved repeatability and enhanced technical measurement capabilities adhere to the most stringent global standards.

To respond to the demands of emergency medical care, medical devices need to sustain more requirements. Through improving our measurement technologies in the manufacture of medical devices, Mitutoyo is committed to contributing to the advancement of medical technology.

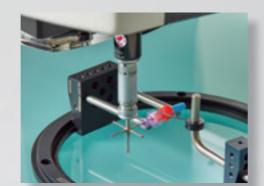


Example of measuring a valve used in medical equipment



Optimized optical system for ultra-small dimensional measurement

By combining ten different objective lenses with a built-in imaging lens, a maximum of 150x optical magnification (4,300x total on-monitor magnification) can be achieved.


This enables measurement of ultra-small parts, such as medical device components.

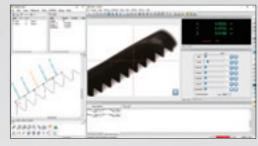

Example of image measurement of medical forceps

High-accuracy 3D measurement

High-accuracy height measurement using single-focus high-resolution images and PFF (Point From Focus) enable 3D capturing of the object shapes, thereby expanding the scope of measurement.

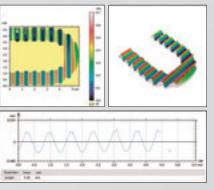

3D analysis of the shape captured by PFF and analyzed with MCubeMap

AUTOMOTIVE


—— Three unique Mitutoyo features supporting high reliability 《Automotive》

Cutting-edge

Flexible measurement of new parts for electric vehicles

With increasing demand for reducing greenhouse gas emissions, automobile production is shifting from gas and diesel vehicles to electric vehicles, shifting the key automotive parts to now change to motors, batteries and semiconductors at an increasingly rapid rate.

The QUICK VISION Pro is optimal for use in the manufacturing processes of, for example, pre-stacking motor core parts that are thin and difficult to touch for measurement, fuel cell separators that have minute surface irregularities and require precise measurement, and semiconductor parts of inverters that require high-speed measurement of microscopic features.

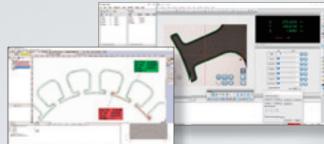

Tolerancing example

Meeting the rigorous quality control standards of the automobile industry


The introduction of CASE technologies will drive demand for electronic and semiconductor parts in the automotive industry. QUICK VISION Pro offers quality control within the automobile industry by providing both contact and non-contact technologies.




Example of measuring an engine control unit

Enabling online programming using 3D CAD models

In addition to online programming using 3D CAD models, an offline program can be created from an image or with a touch probe. This makes it possible to increase up-time of the QUICK VISION Pro main unit, thereby shortening production lead times.

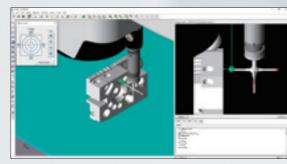

Online programming using 3D CAD models

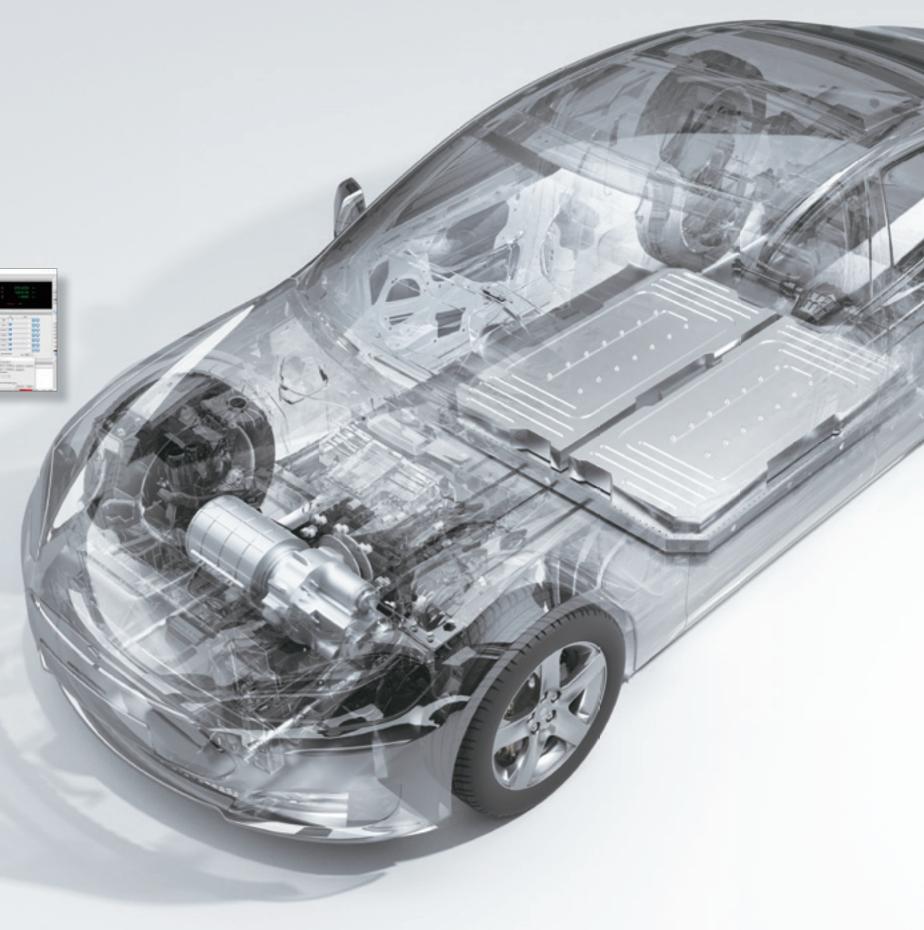




Copper wiring

APPLICATION


Example of non-stop measurement by STREAM

The QUICK VISION Pro, with its high-throughput capabilities, is suitable for highly accurate and fast measurements of mounting positions (ie: die shift) in the manufacturing process of semiconductor packages like FO-PLP.

Moreover, rich IO software (optional) means you can easily incorporate automation, such as automatic transfer of workpieces with a SCARA robot, etc.

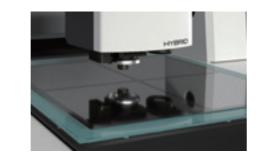


Objective moves up and

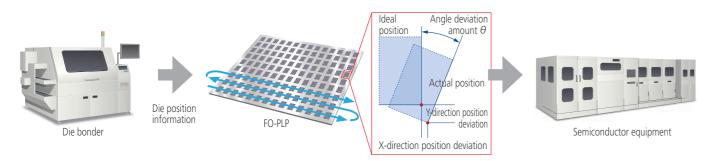

Automatic

Example of Z-axis tracking high-throughput measurement


QUICK VISION Pro can deliver high-speed and high-efficiency edge detection, due to the newly developed StrobeSnap function. By utilizing the TAF (Tracking Auto Focus), it can deliver high-speed measurement of an edge that fluctuates in the vertical direction, by tracking the edge automatically.

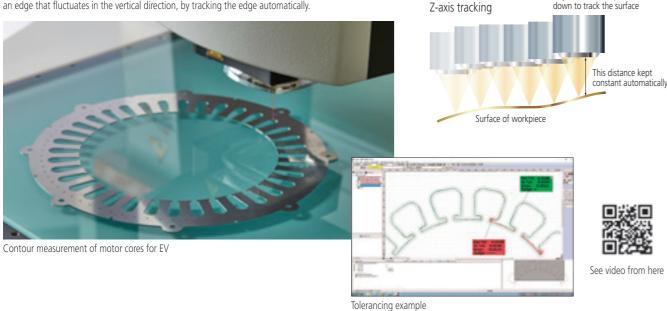

Example of ultra-small 3D shape dimension measurement

QUICK VISION can obtain ultra-small shape dimensions in 2D/3D, due to a wide variety of sensing technologies, such as PFF, WLI, and CPS. For example, when measuring the features of a multilayer board, including wiring line & space, via diameter, and surface roughness measurement, QUICK Solder mask VISION can take measurements and analyze 3D shapes by using the white light interferometer WLI. Solder bal

Flip-chip IC package board

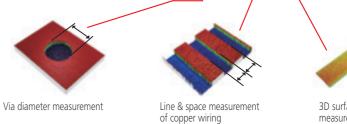


3D surface roughness

11

Example of measuring medical device components

When measuring "Medical" components of ultra-small dimensions requiring high "reliability" QUICK VISION Pro is effective in ultra-small workpieces, due to a wide variety of objective lenses. Therefore, even a fine contour that is difficult for conventional contact-type measuring instruments can be measured by PFF, which performs 3D measurement based on image contrasts, and CPS

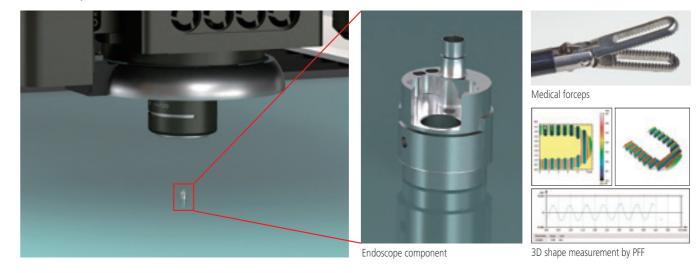

TECHNOLOGY


Rich functionality supporting various kinds of measurement


The QUICK VISION Pro achieves the high-level integration of the measurement technologies that Mitutoyo has developed over the years. By combining standard objective lenses, special software (QVPAK), and various optional sensors, the QUICK VISION Pro provides a wide range of functions to support various kinds of measurement. While meeting the growing requirements of measurement environments, it continues to improve these functions to strongly support solving any challenges.


1 StrobeSnap

A magnified image captured through the optical lens is displayed on a PC screen. Various functions including edge detection and auto focus can be used for dimensional measurement (common to all models).

3 Non-contact measurement of steep angle surfaces and transparent object

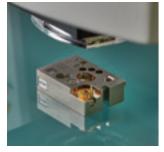






4 Capturing microscopic features of a 3D object using white light interference

Differences in the focal length of the white light source are used to measure an angled surface. Additionally, thickness of a thin, transparent object is measured by simultaneous Using the white light interference that occurs between detection of surface heights at two points on the object.






without rotating it, something that is difficult with the

2 Measuring a 3D object without moving it

Touch Trigger Probe

By also using the touch trigger probe, the system can

capture a 3D object by measuring its sides at a given height

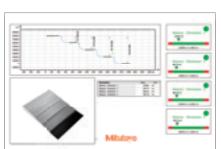

White Light Interferometer


the system and the object, the system performs high-accuracy 3D measurement for surface texture analysis (roughness, etc.) and shape measurement (irregularities of several µm) in a minute area.



PFF (Point From Focus)

3 5

Scanning the object by auto focusing the objective lens can capture multiple cross-section images (image contrasts) at different heights. Thus obtaining 3D shape data from such images.

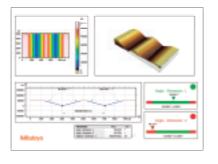

High-speed non-contact measurement of minute height difference and curved shape

Laser Probe

The laser confocal sensor, less affected by the color of the object, can scan surfaces. The sensor scans the object to capture the surface shape data in a non-contact manner.



Simple measurement procedure OV Index

Surface of workpiece

Measuring shapes of all kinds of objects Tracking Auto Focus (TAF)

Z-axis tracking

throughput.

Laser emitted from the objective lens enables automatic focusing.

The system automatically keeps the object in focus according to its shape, eliminating the task of focus adjustment and increasing measurement

> The indexing table turns the object to enable automatic measurement of multiple surfaces in a

Objective moves up and

This distance kept constant automatically





QUICK VISION Pro Core functions providing high-throughput measurement


The observation unit and the lighting unit of QUICK VISION Pro have been updated, increasing the measurement throughput by about 40% compared with conventional models. Furthermore, measurement programming in two modes has made it possible to conduct high-throughput measurement of any measurement sample. TAF and high-speed auto-focus provide amazingly high throughput even for measurement samples of varying height.

StrobeSnap

All the QUICK VISION Pro models are equipped with a strobe light, and the newly developed vision measuring function "StrobeSnap" delivers measurements with both high throughput and high accuracy. Regardless of the continuity of measuring positions, measuring time can be shortened by about 35 to 45% for most measurement samples. Due to the excellent compatibility with part programs allows a part program to be created for high-speed measurement with ease.



See video from here





Note: Comparison with old specifications using our demo sample

STREAM function (optional)

The STREAM function provides an amazingly high throughput, due to the non-stop measurement where the camera motion and the strobe light are synchronized.

It can shorten measuring time more than StrobeSnap on account of continuous element measurement as shown in the following conceptual image of measurement.


The STREAM function of QUICK VISION Pro, including the HYPER model, can be upgraded as an option.




See video from here



XY=0.2 mm pitch, 626 Measured with a field of view of 0.62×0.47 mm STREAM measurement 36 sec



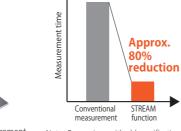


Note: Comparison with old specifications using our demo sample

Tracking Auto Focus (TAF)

Height change in a workpiece can be tracked in the Z-axis direction quickly by laser. StrobeSnap and STREAM allow it to perform effectively, resulting in a significant increase of measurement throughput.



See video from here

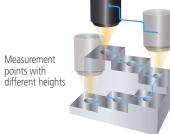



Thin shapes prone to deformation

High-performance image auto focus


The image auto focus of QUICK VISION Pro can measure the height of mirror-finished surfaces through to rough surfaces, such as machined surfaces and plastic molded parts, with high accuracy and at high speed under any conditions. Image auto focus speed has been improved by about 30% compared with conventional models.



semiconductor parts.




By projecting a pattern through the optical path, auto focus can be applied to even surfaces on which it is difficult to obtain contrast, such as glass surfaces, film surfaces, and mirror-finished surfaces used widely for



method

Multi-point auto focus

Multi-point auto focus can be used to set multiple focus positions, sizes, and angles to independent locations. This tool can be used to obtain multiple sets of height information with a single focus operation, which makes it possible to perform highly efficient height and flatness

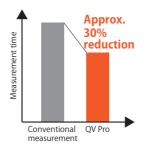

Note: Comparison with old specifications using our demo sample

Highly Functional Illumination Unit

- QUICK VISION Pro uses LEDs' for all of their light sources: contour, surface, and programmable
- · Lighting uniformity has been achieved at a high level, which leads to excellent part program compatibility between multiple QUICK VISION machines.
- LED light sources have excellent responsiveness, which improves measurement throughput.
- LED light sources have longer life spans than halogen types, which reduces illumination fluctuations and thereby minimizes any errors caused by changes in light intensity.



Surface illumination






Programmable ring light illumination Contour illumination

Programmable Ring Light (PRL)

Changing the positions of the two curved mirrors sets the ring light's direction to any chosen value between 30° and 80°. This is effective for enhancing the edges of inclined surfaces or very small steps.

Furthermore, the PRL light's illumination can be controlled independently in every direction, front and back, right and left. This makes it possible to configure highly variable lighting settings to match measurement locations.

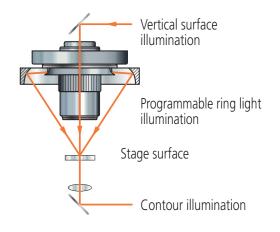






White LED illumination/Color LED illumination

With QUICK VISION Pro, white LED lighting is standard with optional colored surface and ring light LED lighting available. The colored LED model can emphasize edge contrast by changing the emitted light color.










Using the pseudo-color image display function generates a color observation image with high color reproducibility from each of the RGB-irradiated images.



See video from here

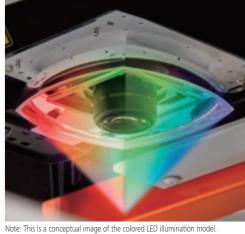

Programmable Power Turret

QUICK VISION Pro's programmable power turret has excellent magnification repeatability which makes it suited for highly accurate measurements. The standard specification permits three steps of magnification: 1x, 2x and 6x*. The rich lineup of objectives includes lenses with magnifications ranging from 0.5x to 25x, which makes it possible to select the optimal optical system to match the measurement target. It is possible to install additional objectives after purchase of the main unit. * Also available as special options: three or four steps of magnification: 1x, 2x, 4x and 6x.

Digital Magnification

Four-step magnification can be obtained, namely 1x, 2x, 6x and with a new 12x digital magnification. As a special option, six-step magnification is available with 1x, 2x, 4x, 6x and new 8x and 12x digital magnification.

When using QV-HR2.5x





Turret 1x Field of view: 2.49 × 1.86 mm Turret 2x Field of view: 1.24 × 0.93 mm





Turret 6x Field of view: 0.41×0.31 mm Digital magnification 12x Field of view: 0.20×0.15 mm

Well-designed structure for high-accuracy measurement

The main unit utilizes a moving Y axis table with a fixed bridge.

Structural deformation caused by movement along each axis has been minimized, which ensures that the QUICK VISION Series can be used to perform highly accurate measurements with minimal spatial coordinate distortions.

(Excludes ACCEL)



All the models of QUICK VISION Pro are equipped with the thermal compensation function.

APEX Manual Input from software

HYPER Automatic Real-time automatic input from X/Y/Z-axis scale and workpiece temperature

sensor

Accuracy guaranteed temperature (1) 20 \pm 2 °C (2)19 to 24 °C AS seen in (1) and (2), accuracy can be guaranteed across a wide range of temperature conditions.



Temperature compensation sensor

Accuracy-guaranteed performance, complying with the MPE notation that includes inspection uncertainty

QV APEX Pro / QV HYPER Pro QVTP APEX Pro / QVTP HYPER Pro QVH4 APEX Pro / QVH4 HYPER Pro QVH1 APEX Pro / QVH1 HYPER Pro QV WLI Pro QV ULTRA

Also complies with ISO10360-7: 2011/JIS B 7440-7: 2015 (optional)


The unit complies with the accuracy guarantee of ISO10360-7/JIS B 7440-7.

Whether performing vision measurement or touch probe measurement, you can measure even spatial position dimensions (including height) with no issues.

For applicable models, see the specs of each model on pages 18 to 22.

Accuracy guarantee items

- ullet Length measurement error $\ensuremath{E_{U,\,MPE}}$
- Probing error P_{F2D, M}



Length measurement error E_{U, MPE}


What is true traceability?

Adopting reference instruments traceable to the national standard

To build customer trust, we adhere to traceability to the national standard.

- Mitutoyo's calibration artifacts and instruments that are used to establish machine accuracy specifications are maintained in a continuous chain of traceability to national dimensional standards. This is our customers' assurance of reliable measurement.
- Our calibration service provider is JCSS certified by IAJapan, which is a certifying body internationally accredited by ILAC in accordance with MRA (Mutual Recognition Arrangement). It has been qualified for measurement techniques equivalent to those of international calibration organizations.


Note: The chart on the right shows an outline of traceability for the vision measuring machine.

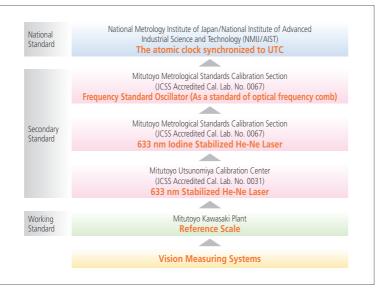

LINE-UP

A wide array of variations and systems available to broaden measurement applications and improve quality control.

The QUICK VISION Pro offers a rich lineup with a wide array of measurement ranges and accuracies useful for implementing quality control in all industries, including medical, automotive, electronics, and semiconductors. It expands measurement applications by combining a vision measuring system that optically magnifies an object image with multiple sensors, including non-contact probes, touch probes and a white light interferometer.

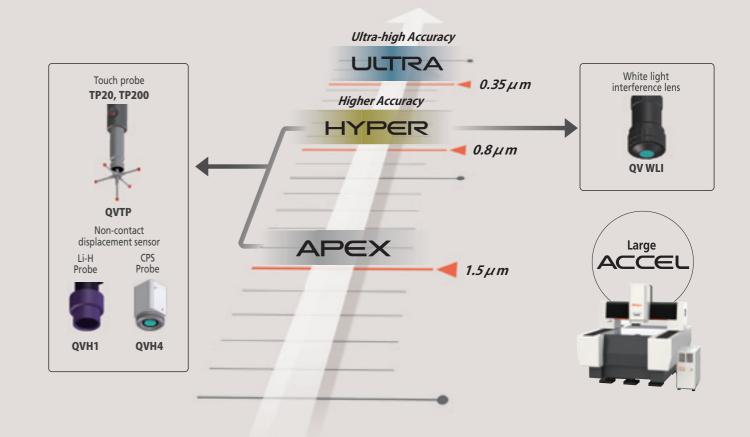







QV APEX Pro

CNC Vision Measuring System



significantly.











quickly focuses on the object improving throughput











- This is a superior model of QUICK VISION, which is • The camera motion and the strobe light are synchronized equipped with the StrobeSnap function as standard, to make non-stop vision measurements without stopping the stage. This makes it possible to use STREAM to enabling high-speed measurement. • We offer a model with tracking auto focus (TAF) that shorten measuring time dramatically.

QV APEX 302 Pro

Model			QV APE	(302 Pro			QV APEX	(404 Pro			QV APE	(606 Pro		
Order No.		363-601-10	363-603-10	363-602-10	363-604-10	363-611-10	363-613-10	363-612-10	363-614-10	363-621-10	363-623-10	363-622-10	363-624-10	
Model		QV-X302P1L-E	QV-X302T1L-E	QV-X302P1C-E	QV-X302T1C-E	QV-X404P1L-E	QV-X404T1L-E	QV-X404P1C-E	QV-X404T1C-E	QV-X606P1L-E QV-X606T1L-E QV-X606P1C-E QV-X606				
Measuring range [mm]		300×2	00×200			400×40	00×250		600×650×250				
Observation unit*1						Programma	able power to	urret 1x, 2x,	6x, (12x)*2	x)* ²				
Tracking Auto Focu	ıs device	_	1	_	1	_	✓	_	✓	_	✓	_	✓	
	Contour illumination		White LED											
Illumination unit	Surface illumination	Whit	e LED	Colo	r LED	White	e LED	Colo	r LED	White	e LED	Colo	r LED	
	PRL	Whit	e LED	Colo	r LED	White	e LED	Colo	r LED	White	e LED	Colo	r LED	
Resolution of scale	[µm]						0.	.1						
V:-:	EUX/EUY, MPE						(1.5 + 3)	L/1000)						
Vision measuring accuracy [µm]	EUXY, MPE						(2.0 + 4)	L/1000)						
accuracy [µm]	EUZ, MPE						(1.5 + 4	L/1000)						
LAF Repeatability	μm]	_	σ ≤0.8	_	σ ≤0.8	_	σ ≤0.8	_	σ ≤0.8 — σ ≤0.8 — σ ≤0.8				σ ≤0.8	
Temperature comp	ensation function						Mar	nual						

^{*1} Programmable power turret 1x, 2x, 4x, 6x model is available as special order. Digital magnification function allows 8x and 12x in addition to 1x, 2x, 4x, 6x. 6 steps of magnification are available in total.

QV HYPER Pro

High-accuracy CNC Vision Measuring System



- The QV HYPER Pro is a highly accurate model that is equipped with a high-resolution/accuracy scale.
- We offer a model with tracking auto focus (TAF) that quickly focuses on the object improving throughput significantly.
- The camera motion and the strobe light are synchronized to make non-stop vision measurements without stopping the stage. This makes it possible to use STREAM to shorten measuring time dramatically.
- There is a general-purpose model with white LED light and an enhanced edge detection model with RGB color LEDs.
- This model is standard-equipped with automatic temperature compensation that uses a temperature sensor on the main unit of the measuring machine and a temperature sensor for the workpiece.



QV HYPER 302 Pro

Product name			QV HYPE	R 302 Pro			QV HYPE	R 404 Pro			QV HYPE	R 606 Pro	
Order No.		363-605-10	363-607-10	363-606-10	363-608-10	363-615-10	363-617-10	363-616-10	363-618-10	363-625-10	363-627-10	363-626-10	363-628-10
Model		QV-H302P1L-E	QV-H302T1L-E	QV-H302P1C-E	QV-H302T1C-E	QV-H404P1L-E	QV-H404T1L-E	QV-H404P1C-E	QV-H404T1C-E	QV-H606P1L-E	QV-H606T1L-E	QV-H606P1C-E	QV-H606T1C-E
Measuring range [mm]		300×2	00×200			400×40	00×250			600×65	50×250	
Observation unit*						Programma	able power to	urret 1x, 2x,	6x, (12x)*2				
Tracking Auto Focu	is device	_	✓	_	1	_	1	_	1	_	1	_	✓
	Contour illumination						White	e LED					
Illumination unit	Surface illumination	White	e LED	Colo	r LED	White	e LED	Colo	r LED	White	e LED	Colo	r LED
	PRL	White	e LED	Colo	r LED	White	e LED	Colo	r LED	White	e LED	Colo	r LED
Resolution of scale	[μm]						0.0	02					
V:-:	Eux/Euy, MPE						(0.8 + 2)	L/1000)					
Vision measuring accuracy [µm]	EUXY, MPE						(1.4 + 3)	L/1000)					
accuracy [µm]	EUZ, MPE						(1.5 + 2)	L/1000)					
LAF Repeatability	[µm]	_	σ ≤0.8	_	σ ≤0.8	_	σ ≤0.8	_	σ ≤0.8	— σ≤0.8 — σ≤			σ ≤0.8
Temperature comp	ensation function						Auto	matic					

^{*1} Programmable power turret 1x, 2x, 4x, 6x model is available as special order. Digital magnification function allows 8x and 12x in addition to 1x, 2x, 4x, 6x. 6 steps of magnification are available in total.

QVTP Pro

CNC Vision Measuring System Equipped with a Touch Trigger Probe













- Three-dimensional workpiece measurements can be performed. Enables 3D measurement of workpieces such as press-molded products, plastic-molded products, and cut products, which until now could not be measured with image processing alone.
- Using the probe module change rack allows switching between vision measurement and touch trigger probe measurement during an automatic measuring sequence.



QVTP HYPER 404 Pro

Product name			ΟΥΤΡ ΔΡΙ	EX 302 Pro			ΟΥΤΡ ΔΡΕ	X 404 Pro			ΟΥΤΡ ΔΡΕ	X 606 Pro	
Order No.		364-601-10			364-604-10	364-611-10			364-614-10	364-621-10			364-624-10
Model						QVT1-X404P1L-E QVT1-X404T1L-E QVT1-X404P1C-E QVT1-X404T1C-E QV							
Measuring range	Vision			00×200		400×400×250				600×650×250			
[mm]	Common to vision touch probe		234×2	00×200		334×400×250				534×650×250			
Observation unit*1						Programma	able power t	urret 1x, 2x,	6x, (12x)*2				
Tracking Auto Focu	ıs device	_	1	_	1	_	✓	_	✓	_	✓	_	1
	Contour illumination		White LED										
Illumination unit	Surface illumination	White	White LED (r LED	White	e LED	Color LED		Whit	e LED	Colo	r LED
	PRL	White	White LED Color LED		r LED	White LED Color LED		Whit	e LED	Colo	r LED		
Resolution of scale	[µm]					0.1							
V	Eux/Euy, MPE						(1.5 + 3)	L/1000)					
Vision measuring accuracy [µm]	EUXY, MPE						(2.0 + 4)	L/1000)					
accuracy [piii]	EUZ, MPE						(1.5 + 4)	L/1000)					
TP measuring accuracy [µm]	Ex, MPE / Ey, MPE / Ez, MPE	(1.8 + 3L/1000)											
LAF Repeatability [μm] — σ ≤0.8				_	σ ≤0.8	_	σ ≤0.8	_	σ ≤0.8	_	σ ≤0.8	_	σ ≤0.8
Temperature compensation function Manual													

^{*1} Programmable power turret 1x, 2x, 4x, 6x model is available as special order. Digital magnification function allows 8x and 12x in addition to 1x, 2x, 4x, 6x. 6 steps of magnification are available in total.

^{*2} The value in parenthesis is for digital magnification change.

Product name			QVTP HYP	ER 302 Pro			QVTP HYP	ER 404 Pro			QVTP HYP	ER 606 Pro	
Order No.		364-605-10	364-607-10	364-606-10	364-608-10	364-615-10	364-617-10	364-616-10	364-618-10	364-625-10	364-627-10	364-626-10	364-628-10
Model		QVT1-H302P1L-E	QVT1-H302T1L-E	QVT1-H302P1C-E	QVT1-H302T1C-E	QVT1-H404P1L-E	QVT1-H404T1L-E	QVT1-H404P1C-E	QVT1-H404T1C-E	QVT1-H606P1L-E	QVT1-H606T1L-E	QVT1-H606P1C-E	QVT1-H606T1C-E
Tracking Auto Focu	✓	_	1	_	✓	_	✓	_	1	_	1		
Resolution of scale	[µm]						0.0	02					
M	EUX/EUY, MPE		(0.8 + 2L/1000)										
Vision measuring accuracy [µm]	EUXY, MPE		(1.4 + 31/1000)										
accuracy [µIII]	Euz, mpe		(1.5 + 21/1000)										
TP measuring accuracy [µm]	Ex, MPE / Ex, MPE						(1.7 + 3	L/1000)					
LAF Repeatability	[μm]	_	σ ≤0.8	_	σ ≤0.8	_	σ ≤0.8	_	σ ≤0.8	_	σ ≤0.8	_	σ ≤0.8
Temperature comp	ensation function	Automatic											

The other specifications are the same as those of QVTP APEX Pro.





^{*2} The value in parenthesis is for digital magnification change.

^{*2} The value in parenthesis is for digital magnification change.

Mitutoyo

QVH4 Pro

Non-contact Displacement Sensor-equipped CNC Vision Measuring System





















- This dual system with a non-contact displacement sensor has a scanning function that enables measurement of minute height differences and 3D
- The non-contact displacement sensor (CPS probe) uses the wavelength confocal method.
- The LED used as the light source of the displacement sensor has an auto-brightness control function that enables seamless measurement of materials with different reflectivity.





QVH4 HYPER 606 Pro

Product name		QVH4 APEX 302 Pro	QVH4 APEX 404 Pro	QVH4 APEX 606 Pro				
Order No.		365-601-10	365-611-10	365-621-10				
Model		QVH4A-X302P1L-E QVH4A-X404P1L-E QVH4						
Main unit Size, mass								
	Vision	300×200×200	400×400×250	600×650×250				
leasuring range [mm] Common to vision non-contact displacement sensor		176×200×200	276×400×250	476×650×250				
Observation unit*1			Programmable power turret 1x, 2x, 6x, (12x)*	2				
	Contour illumination		White LED					
Illumination unit	Surface illumination	White LED						
	PRL		White LED					
Resolution of scale [µm]			0.1					
	EUX/EUY, MPE		(1.5 + 3L/1000)					
Vision measuring accuracy [µm]	EUXY, MPE		(2.0 + 4L/1000)					
accuracy [µiii]	Euz, mpe		(1.5 + 4L/1000)					
Displacement sensor measuring accuracy [µm]*3	E _{1Z}	(1.5 + 4L/1000)						
Temperature compensation	tion function		Manual					


^{*1} Programmable power turret 1x, 2x, 4x, 6x model is available as special order. Digital magnification function allows 8x and 12x in addition to 1x, 2x, 4x, 6x. 6 steps of magnification are available in total.

^{*3} Determined by Mitutoyo's inspection method.


Product name		QVH4 HYPER 302 Pro	QVH4 HYPER 404 Pro	QVH4 HYPER 606 Pro					
Order No.		365-605-10 365-615-10 365-62							
Model	QVH4A-H302P1L-E QVH4A-H404P1L-E QVH4A								
Resolution of scale [ım]		0.02						
M	Eux/Euy, MPE		(0.8 + 2L/1000)						
Vision measuring accuracy [µm]	EUXY, MPE		(1.4 + 3L/1000)						
accuracy [µiii]	EUZ, MPE		(1.5 + 2L/1000)						
Displacement sensor measuring accuracy [µm]]* E _{1Z}	(1.5 + 2L/1000)							
Temperature comper	sation function	Automatic							

The other specifications are the same as those of QVH4 APEX Pro.

^{*} Determined by Mitutoyo's inspection method.

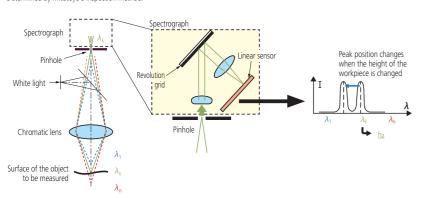



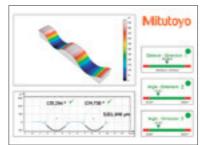


QVH1 Pro

Non-contact Displacement Sensor-equipped CNC Vision Measuring System



- shapes. • The double-pinhole technique is used as the detection method of the displacement sensor. It is less directional compared with the knife-edge and triangulation techniques.
- The small laser spot with diameter of about 2 µm makes it possible to measure minute shapes.



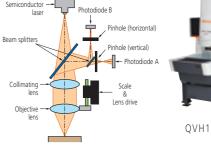



Cannot be sold in the EU countries and the UK for the time being due to non-compliance with EU RoHS Directive.

- 1							
Product Name		QVH1 APEX 302 Pro	QVH1 APEX 404 Pro	QVH1 APEX 606 Pro	QVH1 HYPER 302 Pro	QVH1 HYPER404 Pro	QVH1 HYPER 606 Pro
Order No.		365-631-10	365-641-10	365-651-10	365-635-10	365-645-10	365-655-10
Model		QVH1-X302P1L-E	QVH1-X404P1L-E	QVH1-X606P1L-E	QVH1-H302P1L-E	QVH1-H404P1L-E	QVH1-H606P1L-E
Main unit							
	Vision	300×200×200	400×400×250	600×650×250	300×200×200	400×400×250	600×650×250
Measuring range [mm]	Common to vision displacement sensor	180×200×200	280×400×250	480×650×250	180×200×200	280×400×250	480×650×250
Observation unit*1				Programmable power t	urret 1x, 2x, 6x, (12x)*2		
	Contour illumination			Whit	e LED		
Illumination unit	Surface illumination			Whit	e LED		
	PRL			Whit	e LED		
Resolution of scale [µm]			0.1			0.02	
Vision massauden	Eux/Euy, MPE		(1.5 + 3L/1000)			(0.8 + 2L/1000)	
Vision measuring accuracy [µm]	Euxy, mpe		(2.0 + 4L/1000)			(1.4 + 3L/1000)	
accuracy [µIII]	Euz, mpe		(1.5 + 4L/1000)			(1.5 + 2L/1000)	
Displacement sensor measuring accuracy [µm]*	E 1Z		(1.5 + 4L/1000)			(1.5 + 2L/1000)	
Temperature compensati	tion function		Manual			Automatic	

^{*1} Programmable power turret 1x, 2x, 4x, 6x model is available as special order. Digital magnification function allows 8x and 12x in addition to 1x, 2x, 4x, 6x. 6 steps of magnification are available in total.

*2 The value in parenthesis is for digital magnification change. *3 Determined by Mitutoyo's inspection method.

QVWLI Pro

Non-contact 3D Measuring System









consisting of QV and a white light interferometer.

measurement at a specific height using the 3D data.



• You can perform 3D surface texture analysis and 3D roughness analysis from 3D data captured by the WLI optical system.

You can also perform dimension measurement and cross-section


















WLI optical system head Interference fringes and intensity depiction

Product Name		QVWLI Pro 404	QVWLI Pro 606				
Order No.		363-716-10	363-717-10				
Model		QVW-H404P1L-E	QVW-H606P1L-E				
Main unit							
Measuring range	Vision	400×400×240	600×650×220				
	Common to vision displacement sensor	315×400×240	515×650×220				
Observation unit*	:1	Programmable power turi	ret 1x, 2x, 6x, (12x)*2				
Contour illumination		White LED					
Illumination unit	Surface illumination	White I	LED				
illumination unit	PRL	White I	LED				
	WLI optical head	Halog	en				
Resolution of scale	e [µm]	0.01					
	Eux/Euy, mpe	(0.8 + 2L/	(1000)				
Vision measuring	EUXY, MPE	(1.4 + 3L/	(1000)				
accuracy [µm]	Euz, mpe	(1.5 + 2L/	(1000)				
	Accuracy guaranteed with optics specified	2.5x objective (QV-HR2.5x or QV-SL2.5x)	and middle magnification tube lens				
WLI Z-axis scannin	ng range (max.)	QVWLI A-5x, QVWLI A-10x: 6.3 mm, QVWL	I A-25x: 3.2 mm, QVWLI A-50x: 1.0 mm				
WLI Z-axis repeata	ability [µm]*3	2σ≤0.08					

^{*1} Programmable power turret 1x, 2x, 4x, 6x model is available as special order. Digital magnification function allows 8x and 12x in addition to 1x, 2x, 4x, 6x. 6 steps of magnification are available in total.

^{*2} The value in parenthesis is for digital magnification change.

^{*2} The value in parenthesis is for digital magnification change. *3 Determined by Mitutoyo's inspection method.

QV ACCEL

CNC Vision Measuring System







suitable for measuring small, thin objects.



can use a simple method to fixture a workpiece, which is















 \bullet QV ACCEL 1212 (range: 1250×1250×100 mm) and QV • Vision measuring machine with moving-bridge type main unit structure suitable for measuring large objects. ACCEL 1517 (range: 1500×1750×100 mm) are available • As the stage is fixed on the moving-bridge structure, you to special order.



QV ACCEL 808

Product name		QV ACCEL 808	QV ACCEL 1010				
Standard model		QV-A808P1L-D	QV-A1010P1L-D				
Measuring range [mm]		800×800×150	1000×1000×150				
Observation unit*1		Programmable power to	urret 1x, 2x, 6x, (12x)*2				
	Contour illumination	White LED					
Illumination unit	Surface illumination	White	e LED				
	PRL	Whit	e LED				
Resolution of scale [µn	n]	0	.1				
Visian	E1x, E1Y	(1.5 + 3	sL/1000)				
Vision measuring accuracy [µm]*2	E _{1Z}	(1.5 + 4	L/1000)				
accuracy [µm]	E _{2XY}	(2.5 + 4	L/1000)				
Repeatability [µm]*2	Short dimension X, Y axis	3σ	≤0.2				
Repeatability [µIII]**	Long dimension	3σ	≤0.7				

^{*1} Programmable power turret 1x, 2x, 4x model and 1x, 2x, 4x, 6x model are available as special order.

QV ULTRA

Ultra-high Accuracy CNC Vision Measuring System






















 \bullet Our proprietary high-resolution (0.01 $\mu\text{m})$ and high-accuracy low-expansion glass scales are used on the X, Y and Z axes.

• The main unit utilizes a highly rigid moving Y axis table with a fixed bridge. The base is made of high stability granite.



OV ULTRA 404

Product name		QV U	LTRA
Order No.		363-520-10	363-521-10
Model		QV-U404P1L-E	QV-U404T1L-E
Main unit			
Measuring range [mm	1	400×40	00×200
Observation unit*1		Programmable power to	urret 1x, 2x, 6x, (12x)*2
Tracking Auto Focus d	evice	_	✓
	Contour illumination	White	e LED
Illumination unit	Surface illumination	White	e LED
	PRL	White	e LED
Resolution of scale [µr	n]	0.0	01
\(\frac{1}{2} \cdot \cdo	Eux/Euy, MPE	(0.35 + 1)	3L/1000)
Vision measuring accuracy [µm]*3	EUXY, MPE	(0.5 + 2	L/1000)
accuracy [µIII]	Euz, mpe	(1.5 + 2	L/1000)
LAF Repeatability [µm]	-	σ ≤0.8

^{*1} Programmable power turret 1x, 2x, 4x, 6x model is available as special order. Digital magnification function allows 8x and 12x in addition to 1x, 2x, 4x, 6x. 6 steps of magnification are available in total.

OPTIONS



QV Objectives

Objective		QV-SL0.5x*1	QV-HR1x	QV-SL1x	QV-HR2.5x	QV-SL2.5x	QV-HR5x	QV-5x	QV-HR10x*1	QV-10x*1	QV-25x*1
Order No.		02AKT199	02AKT250	02ALA150	02AKT300	02ALA170	02AWD010	02ALA420	02AKT650	02ALG010	02ALG020
Set of objectives that	t support PFF	_	I	ı	02AKX895B	_	02AXA915B	02AKX900B	02AKX905B	I	02AKX910B
Working distance [m	m]	30.5	40.6	52.5	40.6	60.0	20.0	33.5	20.0	30.5	13.0
	Turret 1x	12.54 x 9.4	6.27	x 4.7	2.49)	(1.86	1.24	(0.93	0.62	(0.47	0.25 x 0.18
Field of view [mm]*2	Turret 2x	6.27 x 4.7	3.13)	(2.35	1.24	(0.93	0.62	(0.47	0.31	(0.23	0.12 x 0.09
	Turret 6x	2.09 x 1.56	1.04	(0.78	0.41	(0.31	0.20	(0.15	0.10 x 0.07		0.04 x 0.03
	Digital magnificationq 12x	1.04 x 0.78	0.52)	(0.39	0.20	(0.15	0.10	(0.07	0.05	(0.03	0.02 x 0.01

^{*1} When the QV-SL0.5x, QV-HR10x, QV-10x, or QV-25x objective is used, some limitations, such as the illumination being insufficient depending on the workpiece, may occur.

^{*2} The values for field of view are not guaranteed values, but representative values.

Monitor magnification*	15x	29x	58x	72x	87x	144x	173x	346x	430x	870x
Field of view [mm]*2	12.54 x 9.40	6.27 x 4.70	3.13 x 2.35	2.49 x 1.86	2.09 x 1.56	1.24 x 0.93	1.04 x 0.78	0.52 x 0.39	0.41 x 0.31	0.20 x 0.15
0.5x objective	•	•			•		•			
1x objective		•	•				•	•		
2.5x objective				•		•			•	•
Monitor magnification*1	144x	290x	580x	720x	870x	1440x	1730x	3460x	4300x	8600x
Field of view [mm]*2	1.24 x 0.93	0.62 x 0.47	0.31 x 0.23	0.25 x 0.18	0.20 x 0.15	0.12 x 0.09	0.10 x 0.07	0.05 x 0.03	0.04 x 0.03	0.02 x 0.01
5x objective	•	•			•		•			
10x objective		•	•				•	•		
25x objective				•		•			•	•

^{*1} The monitor magnification is a reference value when an image is displayed at 1x screen magnification on a 22-inch wide LCD monitor. QVPAK version 10 or later supports changing of video window size.

Calibration Chart and QV Compensation Chart


Calibration chart

A calibration chart is used to compensate for the pixel size of the camera imaging chip and for the auto focus accuracy and optical axis offset at each magnification of the variable magnification unit (PPT).

Note: There are limitations on the function, depending on the lens. For details, contact your Mitutoyo sales office.



This glass chart is used to perform compensation for distortions within the screen caused by the optical system, and auto focus compensation, which reduces auto focus variations that are caused by differences between the workpiece pattern and texture.



Note: There are limitations on the function, depending on the lens. For details, contact your Mitutoyo sales office.

^{*2} Determined by Mitutoyo's inspection method. Short dimension = Repeatability within a single screen; Long dimension = Repeatability over several screen movements

^{*2} The value in parenthesis is for digital magnification change.


^{*3} Determined by Mitutoyo's inspection method.

^{*2} The values for field of view are not guaranteed values, but representative values.

SOFTWARE

Application software that offers both functionality and operability


In addition to high-performance vision measuring functions, we offer a wide range of software applications such as, shape analysis using a non-contact displacement sensor and automatic creation of measurement programs. From simple to complex measurements, our lineup can resolve any measurement issues that our customers may encounter.

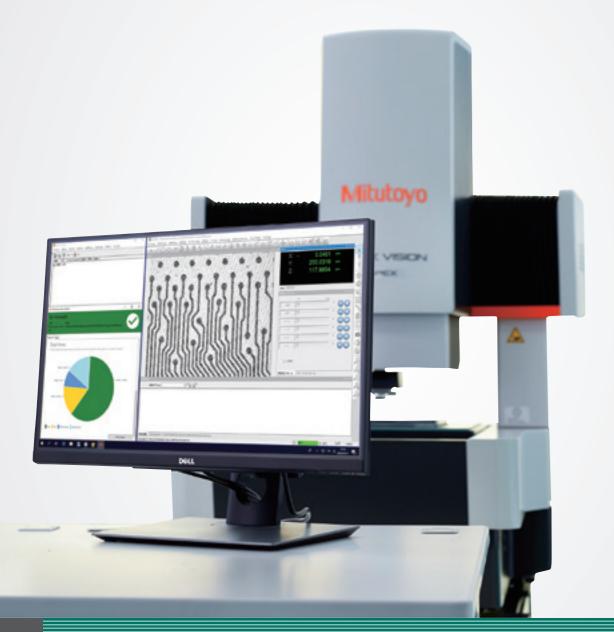

A rich choice of measuring functions

1 One-click Tool

Whatever your proficiency level, this function enables you to perform high-accuracy measurements by simply selecting the measurement item (circle, line, etc.) and clicking the edge to measure once. The outlier removal function automatically removes traces of burrs and contaminants.

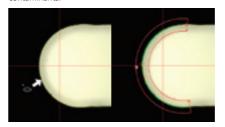

2 AI Illumination Tools

There are two tools: the dual area contrast tool, which can adjust the light intensity to the optimal value at procedure creation time, and the brightness tool, which automatically compensates the light intensity at program creation time. These tools stabilize the light intensity during repeat measurements, which increases edge detection repeatability and reduces the occurrence of edge detection errors caused by light intensity fluctuations.






Dual Area Contrast Tool Brightness

3 Multi-point Auto Focus


You can subdivide an auto focus tool or set up multiple auto focus tools at desired sizes, positions and angles.

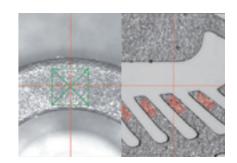

4 QV Graphics




Not only can this feature be used for reports of measurement results, but also high-level calculations, such as calculations between elements and PCD measurements can be performed by selecting diagrams with the mouse. In addition, effective use of the graphics function makes it possible to easily edit part programs and is also useful in checking the coordinate system of the current workpiece and in checking for any forgotten measurements.

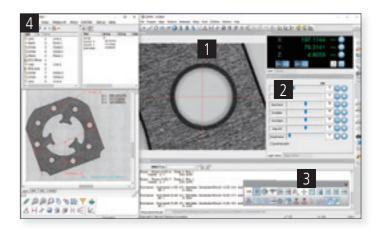

5 QV EasyEditor

QV EasyEditor records and allows you to easily edit the details of the operator's operation

The program list displays error icons for you to quickly find the parts to

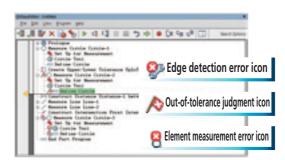

6 MiCAT Reporter

MiCAT Reporter is equipped as standard with a purpose to create reports from the QVPAK measurement results. The software can output data into PDF directly, allowing you to create medical component reports and other reports requiring reliability.



OPTIONAL SOFTWARE

FORMTRACEPAK-AP

Form Evaluation and Analysis Software

FORMTRACEPAK-AP performs tolerancing and form analysis from data obtained with the QV's auto trace tool, non-contact displacement sensor, WLI, and PFF.

Contour Tolerancing Function

Design data creation

CAD data conversion, master workpiece conversion, function specification, text file conversion, and aspherical surface design value creation

Tolerancing

Normal vector direction tolerancing, axial direction tolerancing, and best-fit tolerancing

Microscopic Form Analysis

- Analyzed items: point measurement, line measurement, circle measurement, distance measurement, intersection measurement, angle measurement, origin setting, and axial rotation
- Calculated items: maximum, minimum, average, standard deviation, and area


Report Creation Function

· Measurement result, error graph, and error developed view

Other Functions

- Recording and executing analysis procedures
- · External output function:

CSV, text or DXF/IGES format output

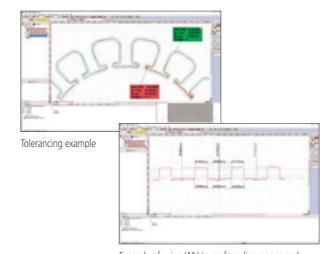


Example of using WLI to perform line, space and conductor thickness measurements on a printed circuit board

MCubeMap

3D Surface Property Analyzing Software

3D data captured by WLI can be analyzed according to parameters compliant with ISO25178-6: 2010, including Sa, Sq and other height parameters and 3D roughness parameters related to space, complexity and functionality.

You can also analyze 2D shapes and measure volumes from the 3D data captured by PFF or QV Hybrid.

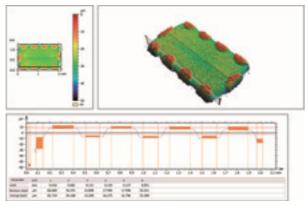

Example of SMD terminal height measurement by PFF


FORMTRACEPAK-PRO

Form Evaluation and Analysis Software

3D data captured by WLI can be analyzed for 3D surface roughness and surface texture. You can also analyze the displayed 3D shape information captured by the non-contact displacement sensor of PFF or QV Hybrid.

Main Functions

- 3D display
- Wire frame, shading, contour line, contour line filling
- Trend compensation and filter processing
- Trend compensation using flat surfaces, spherical surfaces, cylindrical surfaces, and polyhedrons 1D and 2D digital filters for each profile
- Digitization of a rich variety of surface textures
- Relative load curves and area distribution curves can be used to evaluate wear and oil accumulation areas.
- Spectral analysis, cutoff area and volume analysis, angle of inclination calculations at peaks and valleys, and histogram calculations of numbers of valleys can be performed.
- Function for extracting features from measurement data
 Extraction of a chosen cross section, slope enhancement, and simultaneous analysis of the peaks and valleys of the cutoff surface can be performed.

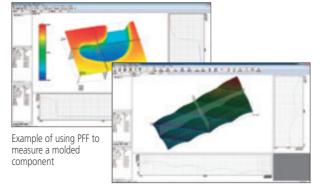

Example of using CPS to perform acrylic lens array measurements

EASYPAG-PRO

Offline Teaching Software

EASYPAG-PRO can use 2D CAD model to create QVPAK part programs offline.

This reduces the number of man-hours required to create part programs, which results in a decrease in programming






Offline teaching operation display

Line-to-arbitrary point distance measurement

OV3DCAD


QV3DCAD creates a QVPAK part program from a 3D CAD model. The current version supports two modes: the online mode that allows you to teach while monitoring the actual workpiece by synchronizing the software with the QV system, and the offline mode that allows you to create a part program on a PC not connected to the main unit.

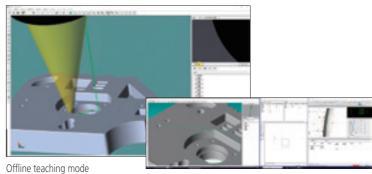

Online teaching mode


MSURF-I

Compares the 3D data captured by CPS, laser, WLI and PFF with the design data of the 3D CAD model, etc. Note: A separate PC is necessary for MSURF-I analysis.

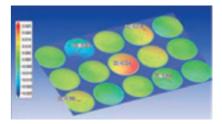

QV3DPAK

QV3DPAK is a software application that composes 3D forms from PFF (Point From Focus) or WLI (White Light Interferometer) data.

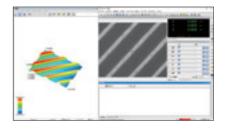





QVEio

IO application making the smart factory real

QVEio-PLC supported example

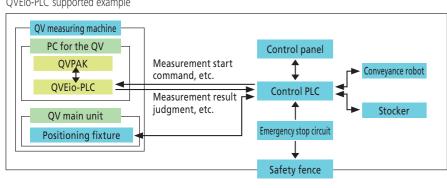

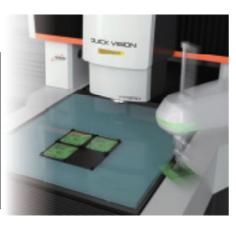


Status Monitor

Can remotely monitor measuring machines • Collects and visualizes operational status data

MeasurLink®

Reduces defective products by visualizing quality

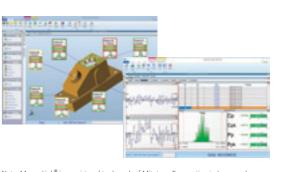

Note: MeasurLink $^{\scriptsize \scriptsize 0}$ is a registered trademark of Mitutoyo Corporation in Japan and Mitutoyo America Corporation in the United States


[•] Supports MT Connect communication

INSPECTION

"DDPAK-QV" - software for the QUICK VISION Series that enables both flaw inspection and high-accuracy measurement

DDPAK-QV is a flaw inspection software for QUICK VISION.

Utilized during measurement to inspect for flaws, such as contaminants, burrs and cracks while performing high-accuracy non-contact measurement at the same time.

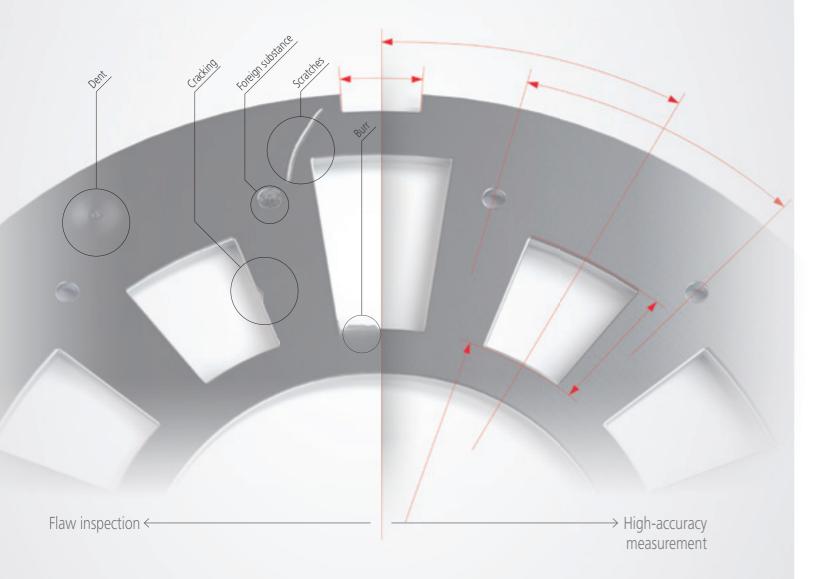


DDPAK-QV

Flaw Inspection Software dedicated for CNC Vision Measuring System QUICK VISION

Feature

- Creates a seamless flaw inspection system that transfers the image data captured by the QUICK VISION Series to DDPAK-QV, outputs the flaw coordinates and automatically saves the image.
- Measures the dimensions of a flaw and analyzes its shape. Analyzing the coordinate, size, depth, height and other statistics of a flaw can help analyze the cause, prevent recurrence, and improve the production process.
- You can add DDPAK-QV, the flaw inspection software, to your QUICK VISION. Add the inspection feature to expand the applications of your QUICK VISION.

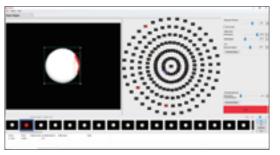





Inspection for foreign substances in shower head diameters

The image of the detected flaw turns red


Chipped blade

Flaw detection example

Chip on glass





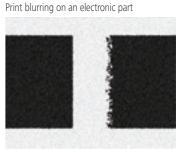

Foreign substance in a hole







ee video from here

Note: DDPAK-QV is available to special order. For details on supported workpieces and flaws, contact your local Mitutoyo sales office.



Whatever your challenges are, Mitutoyo supports you from start to finish.

Mitutoyo is not only a manufacturer of top quality measuring products but one that also offers qualified support for the lifetime of the equipment, backed up by comprehensive services that ensure your staff can make the very best use of the investment.

Apart from the basics of calibration and repair, Mitutoyo offers product and metrology training, as well as IT support for the sophisticated software used in modern measuring technology. We can also design, build, test and deliver measuring solutions and even, if deemed cost-effective, take your critical measurement challenges in-house on a sub-contract basis.



Find additional product literature and our product catalogue

https://www.mitutoyo.co.jp/global.html

Our products are classified as regulated items under Japanese Foreign Exchange and Foreign Trade Law.

Please consult us in advance if you wish to export our products to any other country.

If the purchased product is exported, even though it is not a regulated item (Catch-All controls item), the customer service

If the purchased product is exported, even though it is not a regulated item (Catch-All controls item), the customer service available for that product may be affected. If you have any questions, please consult your local Mitutoyo sales office.

Note: Product illustrations are without obligation. Product descriptions, in particular any and all technical specifications, are only binding when explicitly agreed upon.

MITUTOYO and MiCAT are either registered trademarks or trademarks of Mitutoyo Corp. in Japan and/or other countries/regions. Other product, company and brand names mentioned herein are for identification purposes only and may be the trademarks of their respective holders.



Mitutoyo Corporation

20-1, Sakado 1-Chome, Takatsu-ku, Kawasaki-shi, Kanagawa 213-8533, Japan T +81 (0) 44 813-8230 F +81 (0) 44 813-8231

https://www.mitutoyo.co.jp